

## How to Change the L2710 Camera Module Menu from Chinese to English

---

This procedure is for changing the L2710 camera module from Chinese to English in the event of a full reset to default or power failure.

1. Set your PTZ controller to the ID of the camera by entering the camera ID and then press "CAM".
2. Verify that you can move the camera.
3. Enter "45" and then press the "CALL" button. The camera menu will now show on the monitor.
4. Using the "WIDE" button, move down to the 5<sup>th</sup> option shown on the monitor.
5. At the 5<sup>th</sup> option, press the "OPEN" button. You should now be at 2<sup>nd</sup> level menu.
6. Using the "WIDE" button, go to the 6<sup>th</sup> option.
7. At the 6<sup>th</sup> option, press the "OPEN" button. The menu should change to English.
8. Enter "45" and then press the "CALL" button; the menu should disappear.