


1 Installation

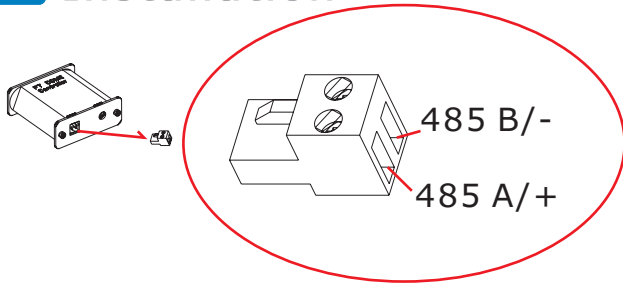


Connect 485 port to PTZ dome 485 cable,
 Connect DC12V to power port.
 After power on, controller will display **A001**
 or **P001**
A means address of command, 001 is
 address number.
P means preset point, 001 is preset number.

A001

P001

Protocol : Pelco-D
 Bitrate: 2400bps

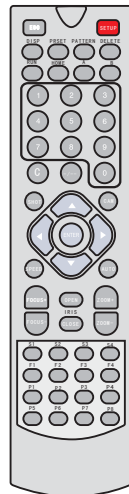

2 Set target camera address

Press **CAM** button go to address command mode.
 It is a command of selecting your target camera,

At this mode, you can input a number by press
 keyboard numeric key,

A001

If you want input a number more than 10,
 You need press **-/--** button change to plus 10
 mode. You can input 3 number at this mode.
 After enter you need input **ENTER** button
 confirm it. Press **C** button do backspace.

A---

A-26

At any mode, if you press **ESC** button, system will
 go to address input mode.

If you only want change a address number below
 10, you only need press numeric key one time.

3 Preset Point

Press **SHOT** button go to preset selecting mode.
 It is a command of selecting preset of your
 target camera,
 At this mode, you can input a number by press
 keyboard numeric key, this is preset number

P001

If you want input a number more than 10,
 You need press **-/--** button change to plus 10
 mode. You can input 3 number at this mode.
 After enter you need input **ENTER** button
 confirm it. Press **C** button do backspace.

P---

P-32

If you want set a preset number, you need
 press **PRSET** button 3 seconds, and controller
 will display **SET-**, at this time you can input a
 number, if you need input a number more
 than 10, you need press **-/--** button at first.
 After input number, need press **ENTER** key
 confirm it.

SET-

P---

If you want clear a preset number, you need
 press **DELETE** button 3 seconds, and controller
 will display **CLR-**, You can input number same
 as set preset.


CLR-

P-12

You can use same way set / clear / go to **HOME**
 and **A**(left limited point) **B**(right limited point)


4 Function List

Protocol: Pelco-D
Bitrate: 2400bps

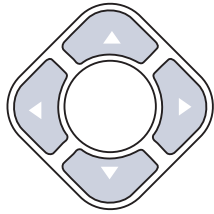

UP DOWN LEFT RIGHT button is controls the movement of pan and tilt cameras

ENTER button is a stop key at movement, And it also is a confirm key when input a number

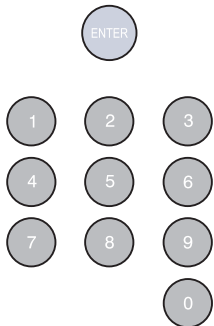

Numeric key 0 - 9 is number input button



C button is a backspace for number input



-/-- is a button for change plus10 mode and normal mode, in normal mode only can input number 0 - 9, in plus10 mode can input number 0 - 255



At any mode, if you press **ESC** button, system will go to address input mode.




Press **CAM** button go to address input mode



Press **SHOT** button go to preset selecting mode.



It is a command of selecting preset of your target camera, **HOME A B** and **P1 - P8** is shortcut key for preset point



PRESET is set preset point
DELECT is clear preset point
This two key need press more than 3 seconds to active it.



AUTO is go to auto cruise mode, Another auto mode is go to preset point 99



SPEED is set speed of movement
S1 -S4 is shortcut key for speed
S1 = 8, S2 = 40, S3 = 51, S4 = 63



FOCUS + focus far
FOCUS - focus near



OPEN Iris open
CLOSE Iris close



ZOOM + zoom wide
ZOOM - zoom tele



PATTERN start / stop learn pattern



RUN a pattern



DISP display software version

F1 - F4 user define shortcut key

